

연희극

덜미
장수

TECHNICAL
RIDER

- **Contact** : alsrl1231@gmail.com
- **Team name** : 놀이꾼들 도담도담
- **Performace title** : 연희극 덜미장수
- **Genre** : Korea Traditional Theatrical Musical
- **Runtime** : 50분
- **Member** : 7 members (Dancers and Musicians)
 - Dancer&Vox1 : 백승태 / Dancer&Vox2 : 서장호 / Dancer&Vox3 : 김지훈
/
 - Dancer&Vox4&Kkwaenggwari: 최영호
 - Narration : 박인선
 - Janggu : 조갑동 / Piri&Taepyeongso : 이찬우 / Music play : 이고운
- **Reference Video** : <https://youtu.be/Yn0RrTentU4>

Stage

- We need 4ea single mat.
- We need about 8,000mm upper stage set.
- The stage must be at least 6,000mm*8,000mm and have a dance floor.
- Need a backstage passage for dancers and musicians to pass by.

1. Sound System

- Should be prepared 3way or 4way system and system control by our sound-engineer.
- Need good condition sound system like D&B, L-Acoustic, Meyer and ETC.
- Sub-Woofer should be driven independent Aux-Out or Matrix.
 - Should be prepared pair of Side Fill speakers and four good condition wedge monitor speakers.

2. Mixing Board System

- Good condition Yamaha CL or QL Series.
- (If it is impossible to prepare Yamaha Series)
Midas M32 with stage rack on the stage or Multichannel box.
- Yamaha O1V96, LS9, Allen&Heath Qu and low grade console, analog console is not allowed.

3. Microphones

wireless	Shure UR4d or Axient Handheld Beta 87a	2ea
	Shure UR4d or Axient Bodypack	4ea
	DPA4061 with DAD6010	4ea
wired	Audio Technica AT4051b	2ea
	Shure SM57	2ea
	Shure SM58	1ea
	Beyer Dynamic M88	1ea
	Radial Pro D2 with 3,5 to TS for laptop	1ea

4. Mic Stands/Acc

stands	Middle Boom mic stands	5ea
	Short mic stands	3ea
	Gooseneck Stand	1ea
	3M Traspore Tape	2ea

5. Input Mic Channel


No.	Inst.	Microphone	Stand/Remark
1	Kkwaenggwari	Shure SM57	Goose
2	Hand Inst	Audio Technica AT4051	Middle
3	Gung	Shure SM58	Short
4	Chae	Shure SM57	-
5	Piri	Beyer Dynamic M88	Middle
6	Melodion	Audio Technica AT4051	-
7	Speaking	Shure W/L Beta87a	-
8	Spare	Shure W/L Beta87a	-
9	W/L Pin 1	DPA 4061	Tape
10	W/L Pin 2	DPA 4061	-
11	W/L Pin 3	DPA 4061	-
12	W/L Pin 4	DPA 4061	-
13	Laptop L	Radial Pro D2	
14	Laptop R		

- Please prepare good condition wash and spot moving light.
- If the moving light is difficult, the tower lights must be correctly positioned in the player's position.
- The console should be prefers MA or Avolites.
- When positioned in the player's place, the face should be clear and there should be no empty space.
- Please refer the video attached below and the preset on the next page for the lighting design.

<https://youtu.be/Yn0RrTentU4>


light	LED Spot Light	10ea
	LED Wash Light	12ea
	2 spared for the each	4ea

Stage Plot

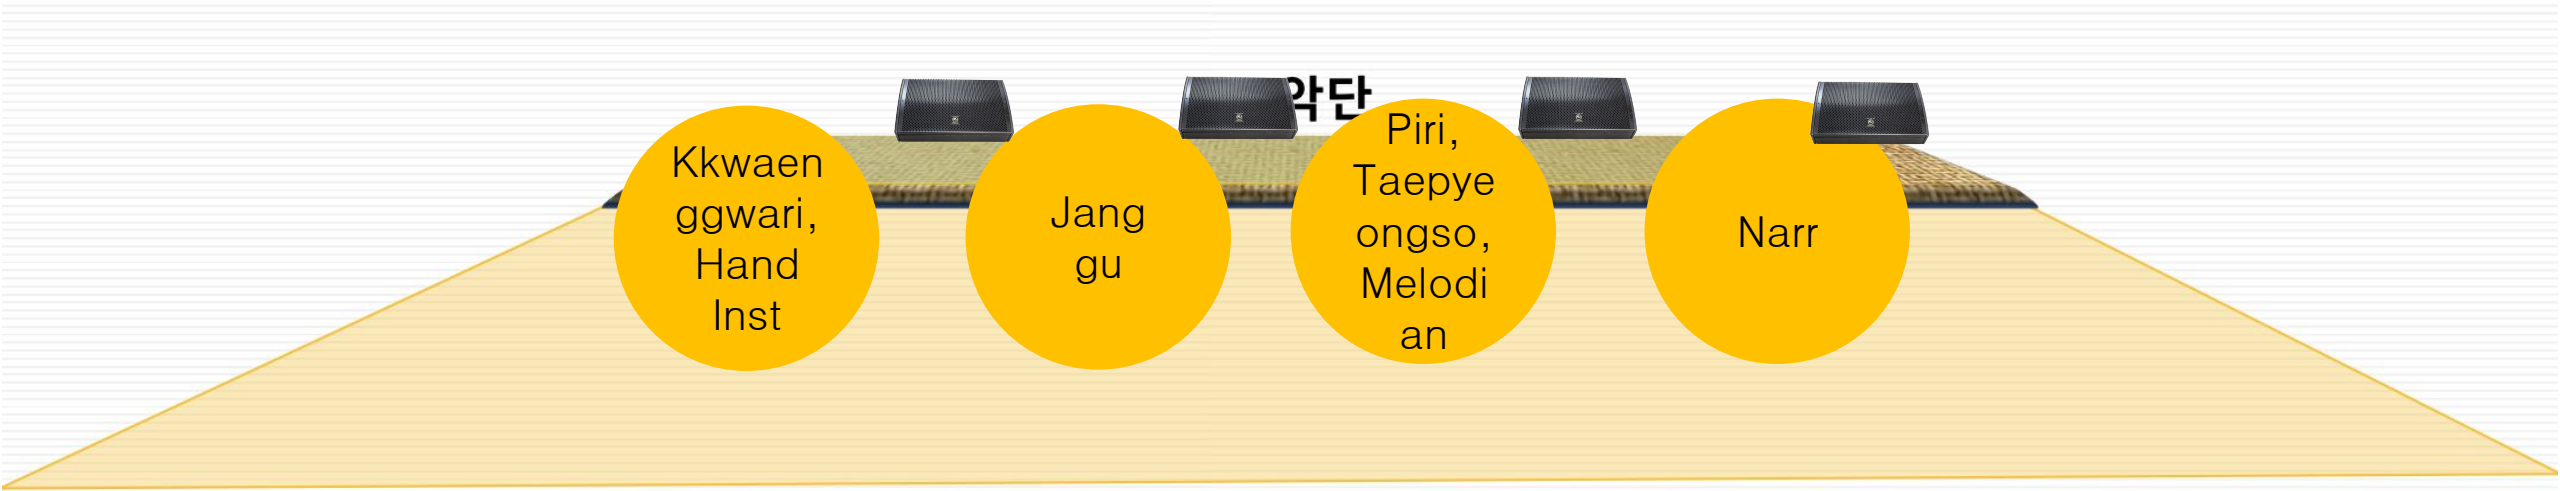



악단

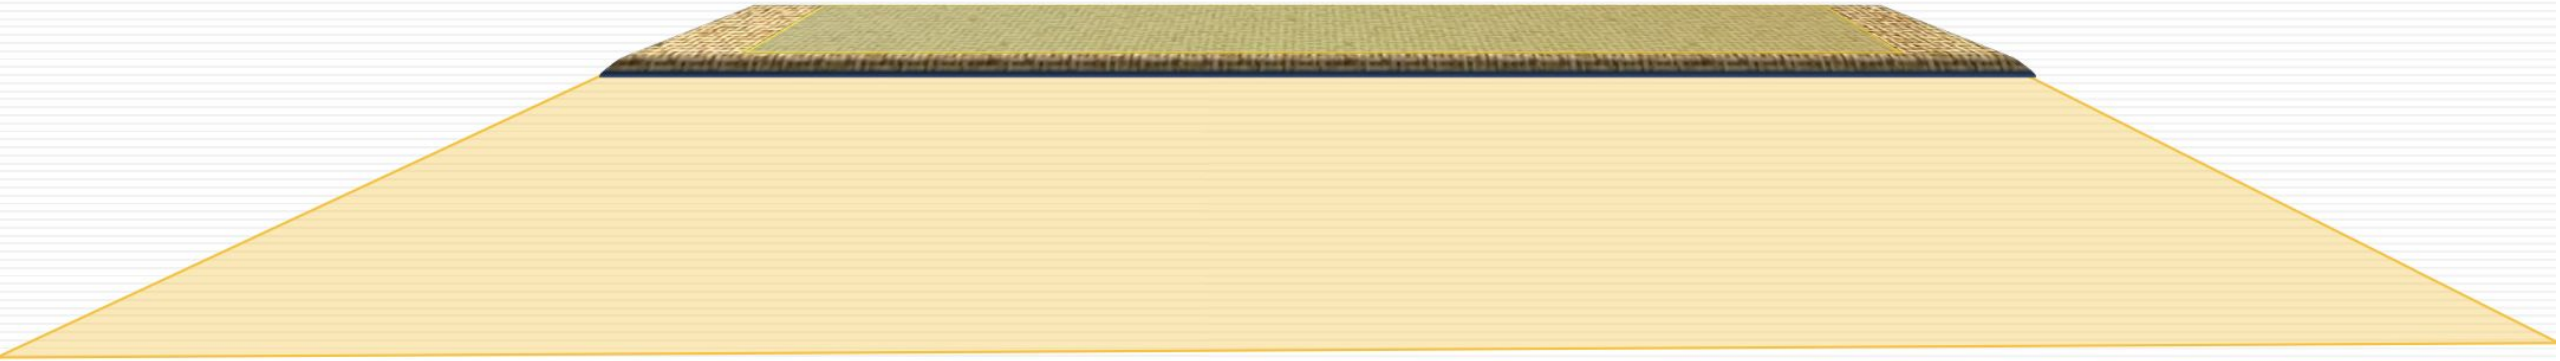



스페셜 탑5



스페셜 탑4